PX400
M E T A L

airpumping.co.uk

WILDEN



PX400 PERFORMANCE





Pro-Flo X[™] Operating Principal


The Pro-Flo X^{TM} air distribution system with the revolutionary Efficiency Management System (EMS) offers flexibility never before seen in the world of

AODD pumps. The patent-pending EMS is simple and easy to use. With the turn of an integrated

control dial, the operator can select the optimal balance of flow and efficiency that best meets the application needs. Pro-Flo X^{TM} provides higher

performance, lower operational costs and flexibility that exceeds previous industry standards.




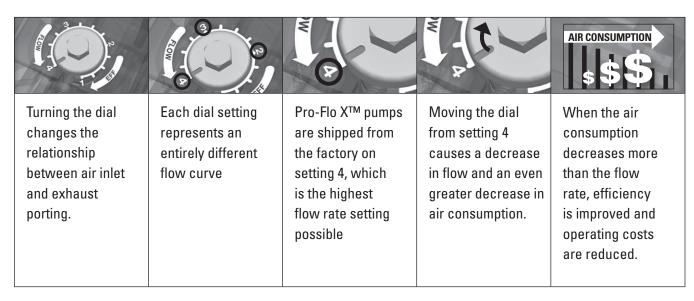





HOW TO USE THIS EMS CURVE

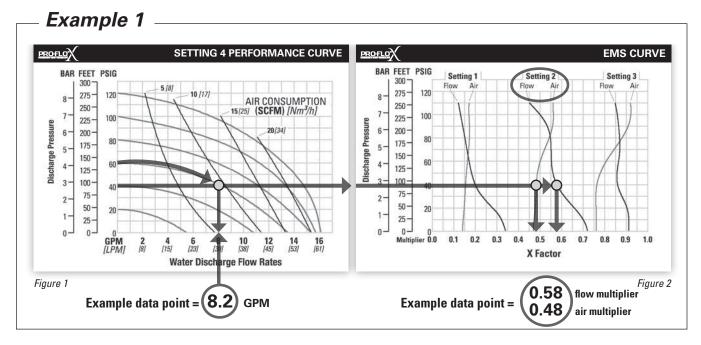

This is an example showing how to determine flow rate and air consumption for your Pro-Flo X^{TM} pump using the Efficiency Management System (EMS) curve and the performance curve. For this example we will be using 4.1 bar (60 psig) inlet air pressure and 2.8 bar (40 psig) discharge pressure and EMS setting 2.

Step 1: Identifying performance at setting 4. Locate the curve that represents the flow rate of the pump with 4.1 bar (60 psig) air inlet pressure. Mark the point where this curve crosses the horizontal line representing 2.8 bar (40 psig) discharge pressure. (Figure 1). After locating your performance point on the flow curve, draw a vertical line downward until reaching the bottom scale on the chart. Identify the flow rate (in this case, 8.2 gpm). Observe location of performance point relative to air consumption curves and approximate air consumption value (in this case, 9.8 scfm).

Step 2: Determining flow and air X Factors. Locate your discharge pressure (40 psig) on the vertical axis of the EMS curve (Figure 2). Follow along the 2.8 bar (40 psig) horizontal line until intersecting both flow and air curves for your desired EMS setting (in this case, setting 2). Mark the points where the EMS curves intersect the horizontal discharge pressure line. After locating your EMS points on the EMS

curve, draw vertical lines downward until reaching the bottom scale on the chart. This identifies the flow X Factor (in this case, 0.58) and air X Factor (in this case, 0.48).

Step 3: Calculating performance for specific EMS setting. Multiply the flow rate (8.2 gpm) obtained in Step 1 by the flow X Factor multiplier (0.58) in Step 2 to determine the flow rate at EMS setting 2. Multiply the air consumption (9.8 scfm) obtained in Step 1 by the air X Factor multiplier (0.48) in Step 2 to determine the air consumption at EMS setting 2 (Figure 3).

8.2 _{gpm}	(flow rate for Setting 4) (Flow X Factor setting 2)
4.8 gpm	(Flow rate for setting 2)
9.8 scfm .48	(air consumption for setting 4) (Air X Factor setting 2)
4.7 scfm	(air consumption for setting 2)


Figure 3

The flow rate and air consumption at Setting 2 are found to be 18.2 lpm (4.8 gpm) and 7.9 Nm³/h (4.7 scfm) respectively.





HOW TO USE THIS EMS CURVE

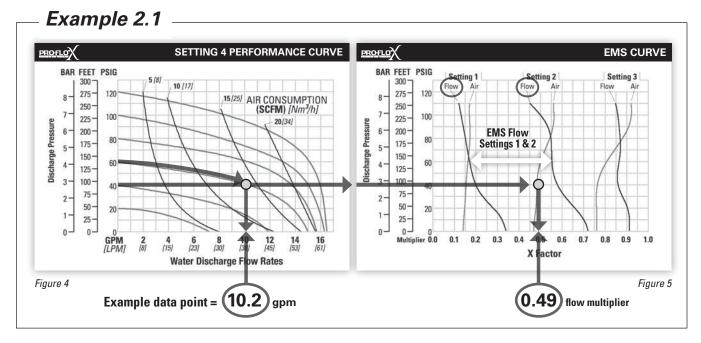

This is an example showing how to determine the inlet air pressure and the EMS setting for your Pro-Flo X™ pump to optimize the pump for a specific application. For this example we will be using an application requirement of 18.9 lpm (5 gpm) flow rate against 2.8 bar (40 psig) discharge pressure. This example will illustrate how to calculate the air consumption that could be expected at this operational point.

DETERMINE EMS SETTING

Step 1: Establish inlet air pressure. Higher air pressures will typically allow the pump to run more efficiently, however, available plant air pressure can vary greatly. If an operating pressure of 6.9 bar (100 psig) is chosen when plant air frequently dips to 6.2 bar (90 psig) pump performance will vary. Choose an operating pressure that is within your compressed air systems capabilities. For this example we will choose 4.1 bar (60 psig).

Step 2: Determine performance point at setting 4. For this example an inlet air pressure of 4.1 bar (60 psig) inlet air pressure has been chosen. Locate the curve that represents the performance of the pump with 4.1 bar (60 psig) inlet air pressure. Mark the point where this curve crosses the horizontal line representing 2.8 bar (40 psig) discharge pressure. After locating this point on the flow curve, draw a vertical line downward until reaching the bottom scale on the chart and identify the flow rate.

In our example it is 38.6 lpm (10.2 gpm). This is the setting 4 flow rate. Observe the location of the performance point relative to air consumption curves and approximate air consumption value. In our example setting 4 air consumption is 24 Nm³/h (14 scfm). See figure 4.

Step 3: Determine flow X Factor. Divide the required flow rate 18.9 lpm (5 gpm) by the setting 4 flow rate 38.6 lpm (10.2 gpm) to determine the flow X Factor for the application.

5 gpm / 10.2 gpm = 0.49 (flow X Factor)


Step 4: Determine EMS setting from the flow **X Factor.** Plot the point representing the flow X Factor (0.49) and the application discharge pressure 2.8 bar (40 psig) on the EMS curve. This is done by following the horizontal 2.8 bar (40 psig) psig discharge pressure line until it crosses the vertical 0.49 X Factor line. Typically, this point lies between two flow EMS setting curves (in this case, the point lies between the flow curves for EMS setting 1 and 2). Observe the location of the point relative to the two curves it lies between and approximate the EMS setting (figure 5). For more precise results you can mathematically interpolate between the two curves to determine the optimal EMS setting.

For this example the EMS setting is 1.8.





HOW TO USE THIS EMS CURVE

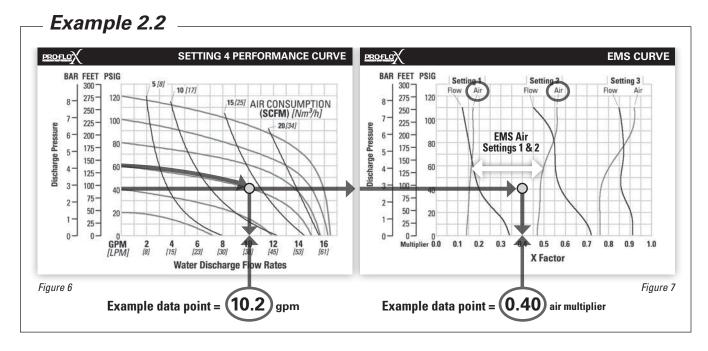

Determine air consumption at a specific EMS setting.

Step 1: Determine air X Factor. In order to determine the air X Factor, identify the two air EMS setting curves closest to the EMS setting established in example 2.1 (in this case, the point lies between the air curves for EMS setting 1 and 2). The point representing your EMS setting (1.8) must be approximated and plotted on the EMS curve along the horizontal line representing your discharge pressure (in this case, 40 psig). This air point is different than the flow point plotted in example 2.1. After estimating (or interpolating) this point on the curve, draw a vertical line downward until reaching the bottom scale on the chart and identify the air X Factor (figure 7).

For this example the air X Factor is 0.40

Step 2: Determine air consumption. Multiply your setting 4 air consumption (14 scfm) value by the air X Factor obtained above (0.40) to determine your actual air consumption.

$$14 \text{ scfm } \times 0.40 = 5.6 \text{ SCFM}$$


In summary, for an application requiring 18.9 lpm (5 gpm) against 2.8 bar (40 psig) discharge pressure, the pump inlet air pressure should be set to 4.1 bar (60 psig) and the EMS dial should be set to 1.8. The pump would then consume 9.5 Nm³/h (5.6 scfm) of compressed air.

Ш J П 0 R \leq D Z C

ш

Hide Arrows

PROFILO

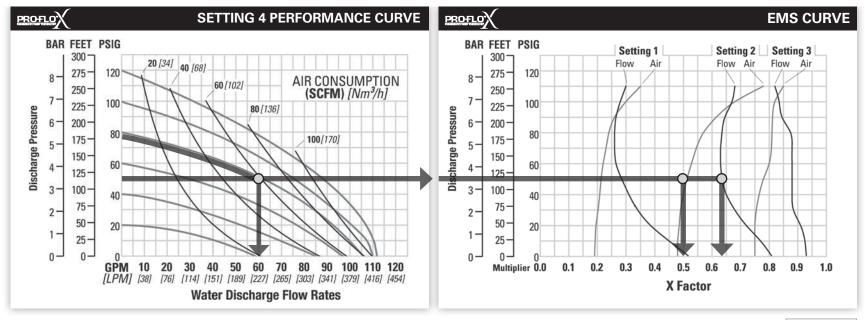

TECHNICAL DATA

ŀ	leight
١	Nidth
[Depth310 mm (12.2")
3	Ship Weight Aluminum 33 kg (72 lbs.)
1	Air Inlet 19 mm (3/4")
I	nlet
(Outlet38 mm (1-1/2")
3	Suction Lift
	9.0 m Wet (29.5')
[Disp. Per Stroke 1.14 l (0.30 gal.) ¹
ľ	Max. Flow Rate
ľ	Max. Size Solids 7.9 mm (5/16")

PX400 ALUMINUM - RUBBER-FITTED

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 aluminum, Rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 227 lpm (60 gpm) using 100 Nm³/h (59 scfm) of air when run at 5.4 bar (79 psig) air inlet pressure and 3.4 bar (50 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 3.4 bar (50 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.63 and the air "X factor" is 0.52 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 143 lpm (38 gpm) and an air consumption of 52 Nm³/h (31 scfm). The flow rate was reduced by 37% while the air consumption was reduced by 48%, thus providing increased efficiency.


For a detailed example for how to set your EMS, see beginning of performance curve section.



Hide Arrows

PROFILO

PX400 ALUMINUM - TPE-FITTED

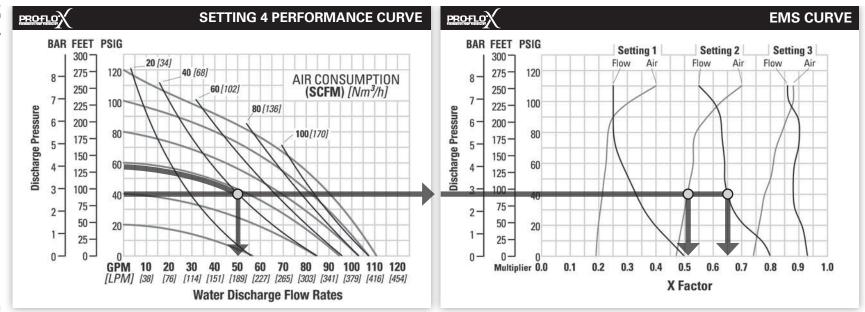

TECHNICAL DATA

Height
Width343 mm (13.5")
Depth
Ship Weight Aluminum 33 kg (72 lbs.
Air Inlet
Inlet
Outlet38 mm (1-1/2")
Suction Lift 5.2 m Dry (17')
8.8 m Wet (28.9')
Disp. Per Stroke 1.17 l (0.31 gal.)
Max. Flow Rate
Max. Size Solids 7.9 mm (5/16")

Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure..

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 aluminum, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 189 lpm (50 gpm) using 68 Nm³/h (40 scfm) of air when run at 4.0 bar (58 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.65 and the air "X factor" is 0.51 (see dots on EMS curve).


Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 123 lpm (33 gpm) and an air consumption of 35 Nm³/h (20 scfm). The flow rate was reduced by 35% while the air consumption was reduced by 49%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.



 ∞

PX400 ALUMINUM - PTFE-FITTED

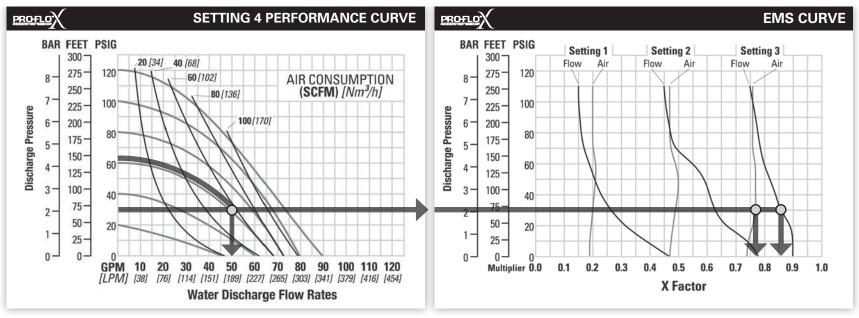

TECHNICAL DATA

Height	")
Width343 mm (13.5)	")
Depth310 mm (12.2)	")
Ship Weight Aluminum 33 kg (72 lbs	s.)
Air Inlet	")
Inlet	")
Outlet38 mm (1-1/2)	")
Suction Lift	∤′)
9.0 m Wet (29.5	j′)
Disp. Per Stroke 0.64 l (0.17 gal.	.)1
Max. Flow Rate	n)
Max. Size Solids 7.9 mm (5/16	")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 aluminum, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 189 lpm (50 gpm) using 99 Nm3/h (58 scfm) of air when run at 4.3 bar (62 psig) air inlet pressure and 2.1 bar (30 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 3 would meet his needs. At 2.1 bar (30 psig) discharge pressure and EMS setting 3, the flow "X factor" is 0.87 and the air "X factor" is 0.72 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 3 flow rate of 165 lpm (44 gpm) and an air consumption of 71 Nm3/h (42 scfm). The flow rate was reduced by 13% while the air consumption was reduced by 28%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.





PROFILO

Ш

J

П

0

R

 \leq

 \triangleright


Z

C ш

PROFLO

9

PX400 ALUMINUM - FULL STROKE PTFE-FITTED

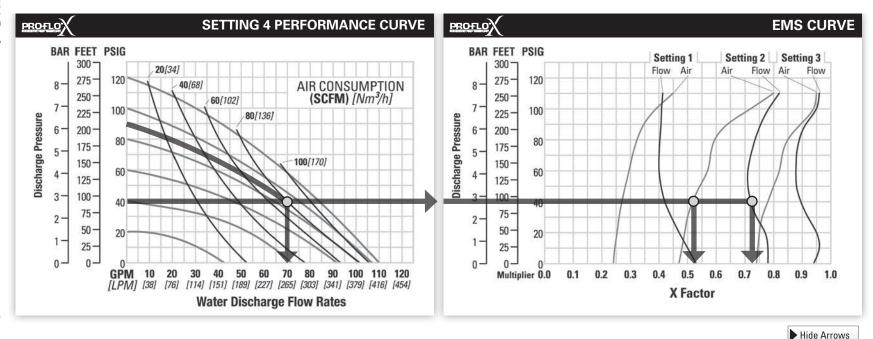

TECHNICAL DATA

Height
Width
Depth
Ship Weight Aluminum 33 kg (72 lbs.)
Air Inlet
Inlet
Outlet38 mm (1-1/2")
Suction Lift 5.7m Dry (18.7')
9.3 m Wet (30.6')
Disp. Per Stroke 1.1 I (.29 gal.) ¹
Max. Flow Rate 413 lpm (109.1 gpm)
Max. Size Solids 7.9 mm (5/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

EXAMPLE


A PX400 aluminum, Full Stroke PTFE fitted pump operating at EMS setting 4, achieved a flow rate of 265 lpm (70 gpm) using 136 Nm³/h (80 scfm) of air when run at 6.2 bar (90 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.72 and the air "X factor" is 0.52 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 191 lpm (50 gpm) and an air consumption of 71 Nm³/h (42 scfm). The flow rate was reduced by 28% while the air consumption was reduced by 48%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

PX400 ALUMINUM – ULTRA-FLEX™

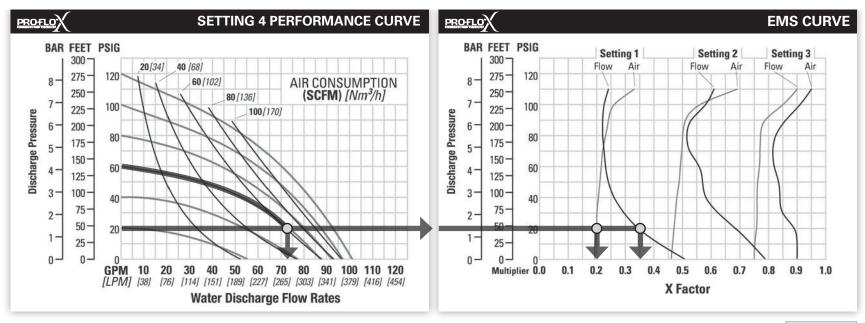

TECHNICAL DATA

Height
Width
Depth
Ship Weight Aluminum 33 kg (72 lbs.)
Air Inlet
Inlet
Outlet38 mm (1-1/2")
Suction Lift
9.0 m Wet (29.5')
Disp. Per Stroke 0.79 l (0.21 gal.)
Max. Flow Rate
Max. Size Solids 7.9 mm (5/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings

EXAMPLE

A PX400 aluminum, Ultra-Flex-fitted pump operating at EMS setting 4, achieved a flow rate of 276 lpm (73 gpm) using 105 Nm3/h (62 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.34 and the air "X factor" is 0.20 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 94 lpm (25 gpm) and an air consumption of 21 Nm3/h (12 scfm). The flow rate was reduced by 66% while the air consumption was reduced by 80%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.



PROFILO

Ш

刀

П

0

R

 \leq

 \triangleright


Z

C ш

Hide Arrows

PROFILO

PX400 STAINLESS STEEL – RUBBER-FITTED

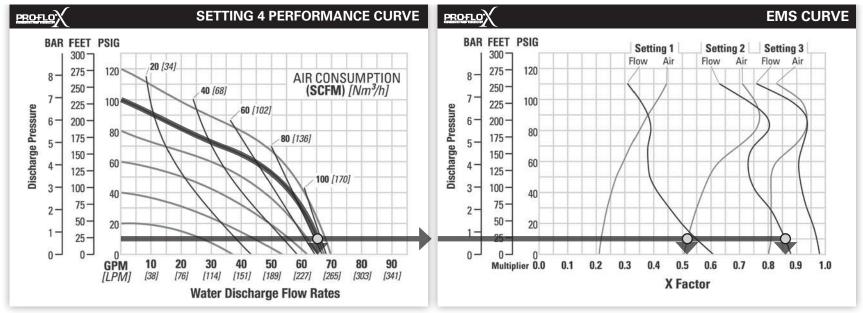

TECHNICAL DATA

Height .528 mm (20.8") Width .384 mm (15.1") Depth .310 mm (12.2")
Ship Weight 316 Stainless Steel43 kg (94 lbs.)
Alloy C 45 kg (100 lbs.)
Air Inlet 19 mm (3/4")
Inlet
Outlet
Suction Lift
9.0 m Wet (29.5')
Disp. Per Stroke 1.0 l (0.26 gal.)
Max. Flow Rate
Max. Size Solids 4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 stainless steel, Rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 250 lpm (66 gpm) using 153 Nm³/h (90 scfm) of air when run at 6.9 bar (100 psig) air inlet pressure and 0.7 bar (10 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 0.7 bar (10 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.87 and the air "X factor" is 0.52 (see dots on EMS curve).


Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 217 lpm (57 gpm) and an air consumption of 80 Nm³/h (47 scfm). The flow rate was reduced by 13% while the air consumption was reduced by 48%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.





PX400 STAINLESS STEEL - TPE-FITTED

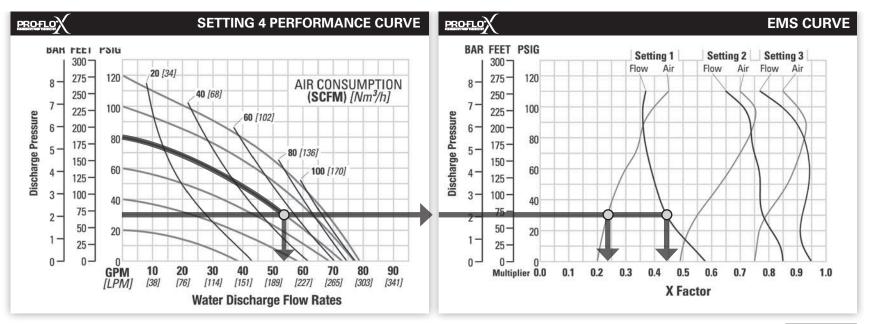

TECHNICAL DATA

Height .528 mm (20.8") Width .384 mm (15.1") Depth .310 mm (12.2")
Ship Weight 316 Stainless Steel43 kg (94 lbs.)
Alloy C 45 kg (100 lbs.)
Air Inlet
Inlet
Outlet38 mm (1-1/2")
Suction Lift
9.0 m Wet (29.5')
Disp. Per Stroke 1.1 I (0.28 gal.) ¹
Max. Flow Rate
Max. Size Solids 4.8 mm (3/16")

Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 stainless steel, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 204 lpm (54 gpm) using 90 Nm³/h (53 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.1 bar (30 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 2.1 bar (30 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.44 and the air "X factor" is 0.24 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 90 lpm (24 gpm) and an air consumption of 22 Nm³/h (13 scfm). The flow rate was reduced by 13% while the air consumption was reduced by 48%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.



PROFILO

Ш

刀

П

0

R

 \leq

 \triangleright

Z

CE

Hide Arrows


П

Hide Arrows

PROFLO

WILDINZ

PX400 STAINLESS STEEL - PTFE-FITTED

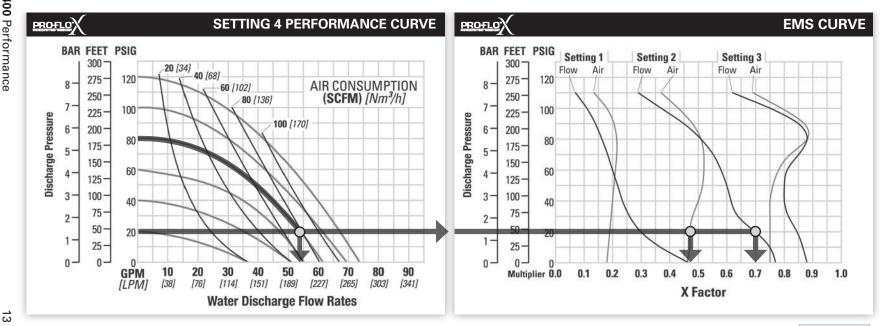

TECHNICAL DATA

Depth		310 mm (12.2")
Ship Weight	316 Stainless Stee	el 43 kg (94 lbs.)
	Alloy	C45 kg (100 lbs.)
Air Inlet		19 mm (3/4")
Inlet		38 mm (1-1/2")
Outlet		38 mm (1-1/2")
Suction Lift		.3.6 m Dry (11.9')
		. 9.0 m Wet (29.5')
Disp. Per Stro	ke	0.5 l (0.14 gal.)1
Max. Flow Ra	te	.280 lpm (74 gpm
Max. Size Sol	ids	4.8 mm (3/16"

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE


A PX400 stainless steel, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 204 lpm (54 gpm) using 133 Nm³/h (78 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.70 and the air "X factor" is 0.47 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 143 lpm (38 gpm) and an air consumption of 62 Nm³/h (37 scfm). The flow rate was reduced by 30% while the air consumption was reduced by 53%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

PX400 STAINLESS STEEL - FULL STROKE PTFE-FITTED

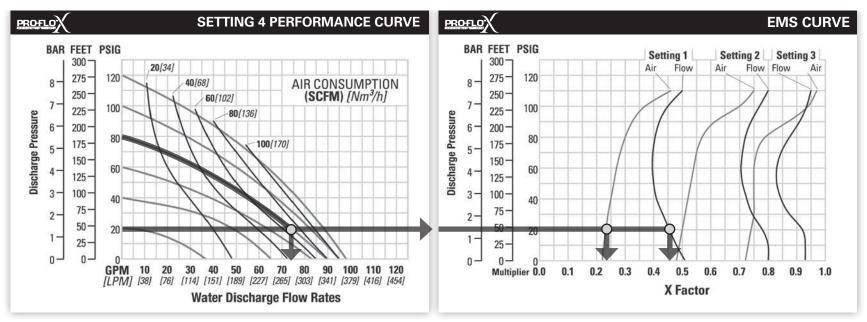

TECHNICAL DATA

Height	528 mm (20.8")
Width	
Depth	
Ship Weight	316 Stainless 43 kg (94 lbs.)
	Alloy C 45 kg (94 lbs.)
Air Inlet	
Inlet	
Outlet	
Suction Lift	6.9 m Dry (22.7')
	9.3 m Wet (30.6')
Disp. Per Stroke	1.1 l (0.28 gal.) ¹
Max. Flow Rate	371 lpm (98.1 gpm)
Max. Size Solids	4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

EXAMPLE

A PX400 Stainless, Full Flow PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 280 lpm (74 gpm) using 121 Nm³/h (71 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.45 and the air "X factor" is 0.23 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 126 lpm (33 gpm) and an air consumption of 28 Nm 3 /h (16 scfm). The flow rate was reduced by 55% while the air consumption was reduced by 77%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

Hide Arrows



PROFILO

Ш

J

П

0

J

 \leq

 \triangleright


Z

CE

Hide Arrows

PROFILO

PX400 STAINLESS STEEL – ULTRA-FLEX™

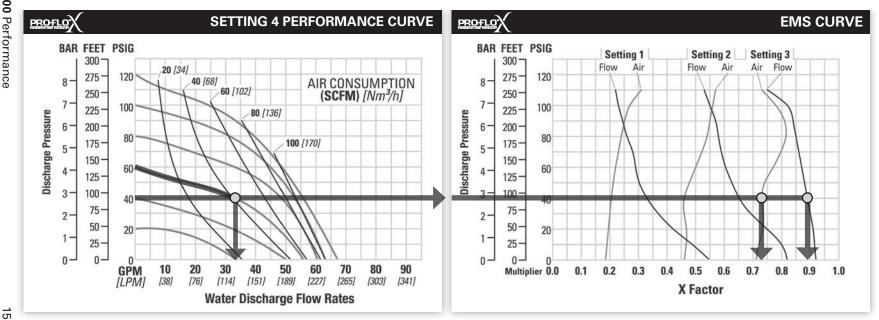

TECHNICAL DATA

Height
Depth
Ship Weight 316 Stainless Steel43 kg (94 lbs.)
Alloy C 45 kg (100 lbs.)
Air Inlet
Inlet
Outlet38 mm (1-1/2")
Suction Lift
9.0 m Wet (29.5')
Disp. Per Stroke 0.6 I (0.17 gal.) ¹
Max. Flow Rate
Max. Size Solids 4.8 mm (3/16")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 stainless steel, Ultra-Flex-fitted pump operating at EMS setting 4, achieved a flow rate of 125 lpm (33 gpm) using 70 Nm3/h (41 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).


The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 3 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 3, the flow "X factor" is 0.89 and the air "X factor" is 0.73 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 3 flow rate of 111 lpm (29 gpm) and an air consumption of 51 Nm3/h (30 scfm). The flow rate was reduced by 11% while the air consumption was reduced by 27%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.



PX400 DROP-IN STAINLESS STEEL – RUBBER-FITTED

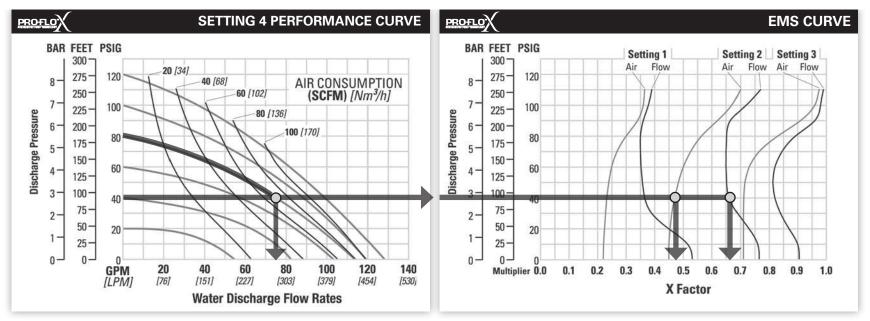

TECHNICAL DATA

Height .445 mm (17.5") Width .444 mm (17.4") Depth .518 mm (20.4") Ship Weight Stainless Steel 50 kg (111 lbs.) Air Inlet .19 mm (3/4") Inlet .38 mm (1 1/2") Outlet .38 mm (1 1/2") Suction Lift .5.9 m Dry (19.5')
Max. Flow Rate

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

²Testing performed using 38 mm (1-1/2") diameter discharge manifolds.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 stainless, rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 280 lpm (74 gpm) using 114 Nm³/h (67 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.66 and the air "X factor" is 0.47 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 185 lpm (49 gpm) and an air consumption of 54 Nm³/h (31 scfm). The flow rate was reduced by 34% while the air consumption was reduced by 53%, thus providing increased efficiency

For a detailed example for how to set your EMS, see beginning of performance curve section. $\label{eq:curve} % \begin{center} \end{center} % \begin{center} % \end{center} % \begin{center} \end{center} % \begin{cen$

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.





PROFLO

Ш

J

П

0

R

 \leq

 \triangleright

Z


CE

Hide Arrows

PROFLO

П D П 0 D \leq D Z C

PX400 DROP-IN STAINLESS STEEL - TPE-FITTED

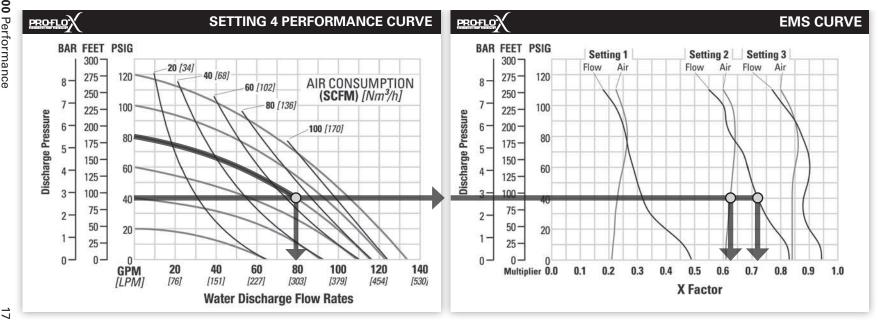

TECHNICAL DATA

Height
Width444 mm (17.4")
Depth518 mm (20.4")
Ship Weight Stainless 50 kg (111 lbs.)
Air Inlet
Inlet
Outlet
Suction Lift 595 m Dry (19.3')
9.0 m Wet (29.5')
Disp. Per Stroke 1.1 I (0.29 gal.) ¹
Max. Flow Rate 507 lpm (134 gpm) ²
Max. Size Solids 6.4 mm (1/4")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig)head pressure.

²Testing performed using 38 mm (1-1/2") diameter discharge manifolds.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 Stainless, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 306 lpm (79 gpm) using 117 Nm³/h (69 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).


The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.72 and the air "X factor" is 0.62 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 220 lpm (57 gpm) and an air consumption of 73 Nm³/h (43 scfm). The flow rate was reduced by 28% while the air consumption was reduced by 63%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.



PX400 DROP-IN STAINLESS STEEL - PTFE-FITTED

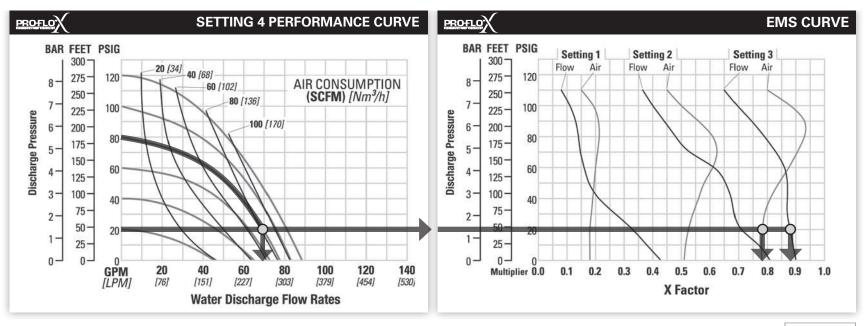

TECHNICAL DATA

Height	
Width	
Depth	
Ship Weight	. Stainless 50 kg (111 lbs.)
Air Inlet	
Inlet	
Outlet	
Suction Lift	
	9.2 m Wet (30.1')
Disp. Per Stroke	0.5 l (0.14 gal.) ¹
Max. Flow Rate	333 lpm (88 gpm) ²
	6.4 mm (1/4")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig)head pressure.

²Testing performed using 38 mm (1-1/2") diameter discharge manifolds.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 Stainless, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 261 lpm (69 gpm) using 139 Nm³/h (82 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 3 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 3, the flow "X factor" is 0.89 and the air "X factor" is 0.78 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 3 flow rate of 232 lpm (61 gpm) and an air consumption of 108 Nm³/h (66 scfm). The flow rate was reduced by 11% while the air consumption was reduced by 22%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.





PROFILO

Ш

J

П

0

R

 \leq


 \triangleright

Z

C ш

PROFILO

PX400 DROP-IN STAINLESS STEEL – FULL STROKE PTFE-FITTED

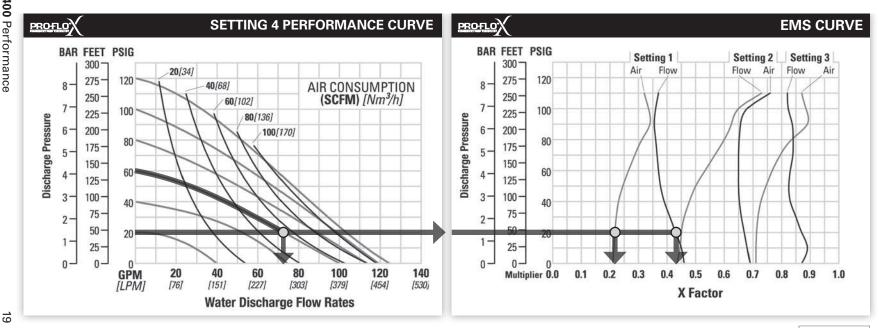

TECHNICAL DATA

Height
Width
Depth
Ship Weight Stainless 50 kg (111 lbs.)
Air Inlet
Inlet
Outlet38 mm (1 1/2")
Suction Lift
9.3 m Wet (30.6')
Disp. Per Stroke 1.0 l (0.26 gal.) ¹
Max. Flow Rate
Max. Size Solids 6.4 mm (1/4")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

EXAMPLE

A PX400 stainless drop-in, Full Flow PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 276 lpm (73 gpm) using 94 Nm³/h (55 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.43 and the air "X factor" is 0.22 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 119 lpm (31 gpm) and an air consumption of 21 Nm³/h (12 scfm). The flow rate was reduced by 57% while the air consumption was reduced by 78%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.






ш

PROFILO

PX400 DROP-IN STAINLESS STEEL – ULTRA-FLEX™-FITTED

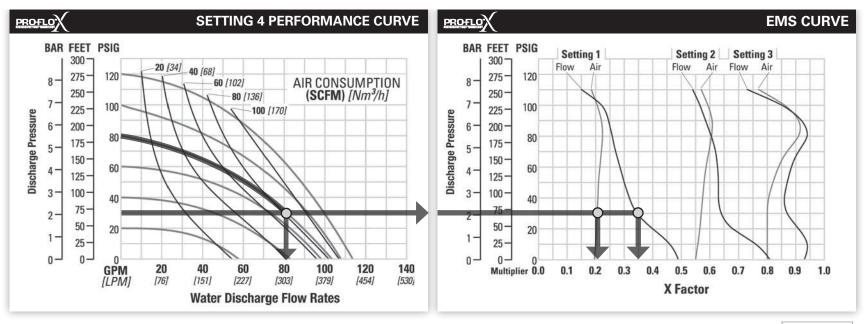

TECHNICAL DATA

_	
Depth	
	Stainless 50 kg (111 lbs.)
Air Inlet	19 mm (3/4")
Inlet	
Outlet	
Suction Lift	5.2 m Dry (17.0')
	9.0 m Wet (29.5')
Disp. Per Stroke	0.8 l (0.22 gal.) ¹
Max. Flow Rate	432 lpm (114 gpm) ²
Max. Size Solids	6.4 mm (1/4")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig)head pressure.

²Testing performed using 38 mm (1-1/2") diameter discharge manifolds.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX400 Stainless, Ultra-Flex fitted pump operating at EMS setting 4, achieved a flow rate of 306 lpm (81 gpm) using 138 Nm³/h (81 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.1 bar (30 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.34 and the air "X factor" is 0.20 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 104 lpm (28 gpm) and an air consumption of 28 Nm³/h (16 scfm). The flow rate was reduced by 66% while the air consumption was reduced by 80%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.











SUCTION LIFT CURVES

PX400 ALUMINUM SUCTION LIFT CAPABILITY

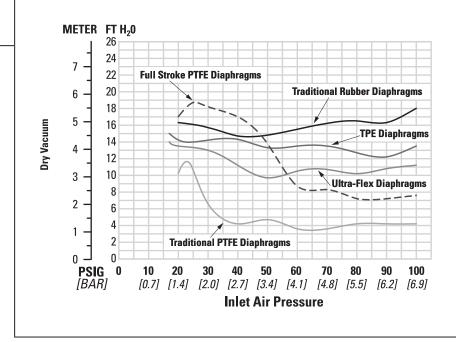

PX400 STAINLESS STEEL & ALLOY C SUCTION LIFT CAPABILITY

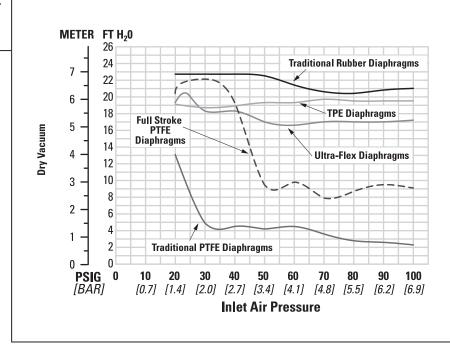

Suction lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables which can affect your pump's operating characteristics. The


number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.





SUCTION LIFT CURVES

PX400 STAINLESS STEEL DROP-IN & ALLOY C SUCTION LIFT CAPABILITY

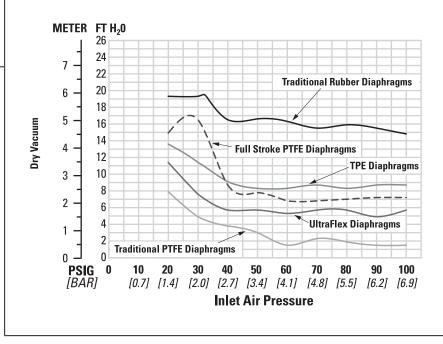

Suction lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables which can affect your pump's operating characteristics. The

number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

